







1. Enter master code (default code 1234) followed by 
2. Scroll to the option “View” and press 
3. Scroll to “Service Info” and press 
4. Scroll to “Panel ID” and press  15 digit Panel ID is now displayed.

LightSYS™2 Quick User Guide



Duress Disarm

Duress  > 



Panic Alarm

Pressing   simultaneously for 2 seconds

Fire Alarm

Pressing   simultaneously for 2 seconds

Medical Alarm

Pressing   simultaneously for 2 seconds






Quick Zones Bypass

Code >



[Zone No.]

Activate Output

 [Code]  [Activities]  [Util Output Num]

Define Follow-Me

 > [Code]  [Follow Me]  [Define]

View Trouble

 [Code]  [View]  [Trouble] 

View Event Log

 [Code]  [Event Log] 




Keypad Chime On/Off

 [Code]  [Activities]  [Keypad sound]  [Chime]

Edit User Code

 [Code]  [Codes/Tags]  [Define]

Zone Testing (Walk Test)

 [Code]  [Maintenance]  [Walk Test] 